

## How to Clean and Maintain the Clip Release Unit

**Why you would do this:** If your clips are getting stuck in the Clip Release Unit then you should clean it. Cleaning the unit every week will help to maintain the unit and prevent clips from sticking. Build up of dust and grit on both the insert and pins will affect its operation.



**You need:** Methylated spirits and a clean lint free cloth.

Tip some methylated sprits onto the cloth.



Hold the unit with one hand and wipe along the face of the insert.

Make sure you clean out the marks/grit from the **grooves** and **corners** of the clip insert.



Once you have done the above, push down the insert with one hand.

While the insert is pressed down, wipe the pins removing all of the grit and any dust build up.

Make sure you clean the entire area of the pin thoroughly.

**At least once a month you should also remove the four screws from the back of the Clip Release Unit and completely remove the cover. This will allow any dirt or dust to be removed from inside the unit. After cleaning the inside, ensure that the springs are aligned correctly under the clip release insert and then replace the cover and replace the four screws.**

Once complete, return to using the system.

If after cleaning the unit you still experience problems with the release unit, please give us a call and we will provide further assistance.