


## How to Insert or Fit a Security Label

- works with Checkpoint and Sensormatic systems

### Method 1 - using a Sensormatic Ultra slim Alarm on a blue, white or black clip with 'cut out'

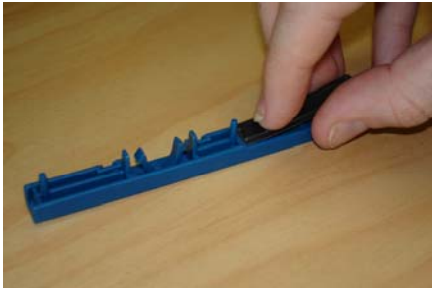

In the middle of the clip there is a 'cut out'. This is the same size as this alarm.

Place the Ultra slim alarm tag between you thumb and fore figure. Butt one end of the tag up to one end of the 'cut out'. Slide your figures along the alarm gently sticking it to the Clip 'cut out' as you go.



### Method 2 - using either an AM or RF security label in the case security chamber



There is no need to remove the backing from the label. Just place the AM or RF security label flat in the security chamber.



## How to Lock the Security Cap in Place



Once your security label is in place take the cap in one hand.

Note the position of the lugs on the cap. There is one at the top and two at the bottom of the cap.

Position the cap in the case so that the two bottom lugs are located first.



Apply downward pressure on the cap with both of your thumbs



The cap will click into place.

That's it - quick and neat.