


Zenith Case - How to Insert and Remove the Vertical Clip

Inserting the Vertical Clip

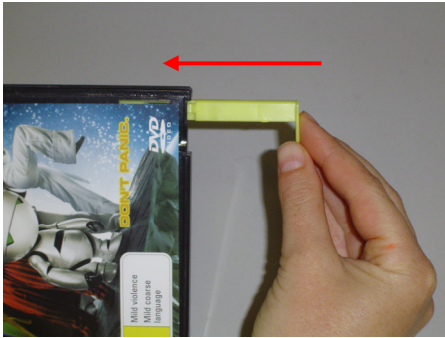

Ensure that the case is closed by applying pressure along the jaw of the case until it is snapped shut.

Slide the Vertical Clip into the corresponding cavity in the Case.



Ensure that the end of the Vertical Clip is flush with the bottom of the case.

The case is now locked and ready for display

Removing the Vertical Clip

Please note :

The release unit should be fixed securely to the counter.

Some customers prefer to fix the release unit to a vertical surface.



Line up the edge of the Case containing the clip with the smaller of the two cavities in the release unit.

Slide the case with clip into the release unit so that the case ends flush at the end of the release unit that has the 45 degree angle (see picture at left).

The clip is now free to be removed from the case. Withdraw the clip whilst keeping the case positioned in the release unit.

After removing the clip simply remove the case from the release unit.

This simple action takes just a couple of seconds.